


CS65-115x65x40

CS65-115x65x40 CASE ASSEMBLY INSTRUCTIONS

- A) Install the silicone gasket into the cover gasket channel. The end of the gasket will mate with the front of the gasket with little to no gap.

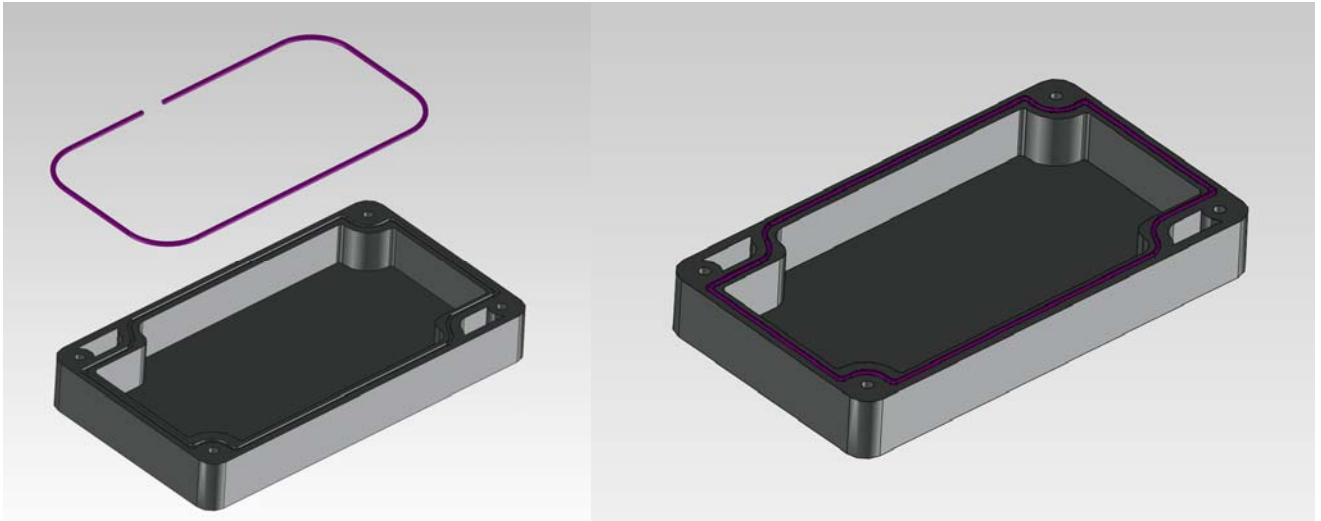

- B) Align the cover with the base. Insert four screws into the corner holes. Tighten the screws evenly until an even 0.025" gap is obtained between the base and the cover.

